



# 1. Self inspection

## **Inspection Points Before Use**

---

1. Is the power cord connected to the socket?
2. Did you check whether the main body's power button is "ON"?
3. Is the remote control temperature displayed when the remote control power is "ON"?
4. Did you check whether the projector's temperature has been set to the appropriate level?
5. Is there anything strange on the exterior?
6. Did you check whether there is no damage to the external projector cover?

## **Inspection Points After Use**

---

1. Did you check whether all displays have been turned "OFF" when the remote control power is "OFF"?
2. Did you check whether the main body's power button is "OFF"?
3. Is the power cord disconnected from the socket?